



To Disassemble and Clean a URG-2000-30EGN-A:

Step 1. Remove the URG-2000-30EGN-A from its installed position in the instrument.

Step 2. Unscrew the collection cup and remove the side from the body by removing the screws with a 7/64" Allen wrench.

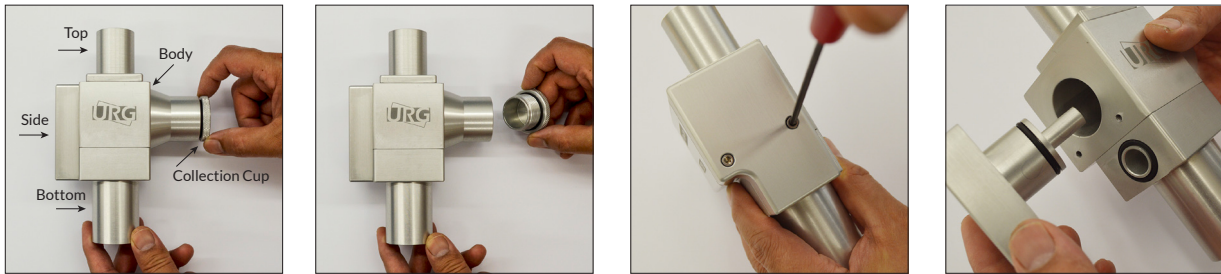

Step 3. Wet a lint free wipe, such as a Kimwipe, with water and remove all visible deposits. These are most likely to be found inside the collection cup as well as the body's interior chamber.

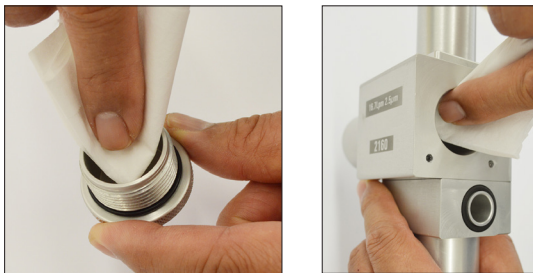

Step 4. Inspect the "O" rings for shape and integrity. If wear is suspected, replace the "O" rings. Lubricate the "O" ring lightly with Dow Corning® High Vacuum Grease. It is important to well lubricate to avoid difficult disassembly.

Step 5. Assemble in reverse order and reinstall.

For additional information as well as replacement parts, please visit our website at:
www.URGcorp.com/index.php/products/inlets/anodized-aluminum-cyclones